




# FIREGUARD

## Indicator Post Underground Type

FGVI388

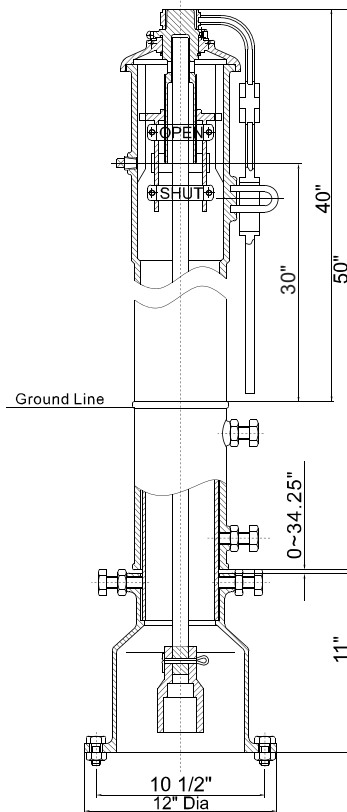

### Materials List

Description	Material
Locking Wrench	ASTM A536
Operating Nut	AISI 304/ASTM B62
Hex Nut Screw	ASTM A105
Hex Nut	ASTM A105
Snap Ring	AISI 066
Target Carrier Nut	AISI 304/ASTM B62
Target	ASTM B108
Hex Cap Screw	ASTM A105
Window Glass	LEXAN-UN
Window Glass Gasket	PTFE
Hex Cap Screw	ASTM A105
Hex Nut	ASTM A105
Body	ASTM A536
Hex Cap Screw	ASTM A105
Hex Nut	ASTM A105
Base Flange	ASTM A536
Hex Cap Screw	ASTM A105
Hex Nut	ASTM A105
Crane Coupling	ASTM A536
Cotter Pin	AISI 304
Stand Pipe	ASTM A53
Stem	AISI 1045
Plug	AISI 304
Cover	ASTM A536
Cross Recessed	AISI 304
Countersunk Head Screw	ASTM 307 B
Locking Nose	ASTM 307 B

### Valve Standard

Fusion bonded coating comply with AWWA C550

### Field Adjustment:

1. Remove the top section from the top of the Indicator Post assembly.
2. Cut the required length off the bottom of the Standpipe for the Ground Line to match up with Standpipe Ground Line mark.
3. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
4. Reattach the Top Section to the top of the Indicator Post assembly.
5. Design and dimensions are subject to change without notice

\*\*\*Note: Subject to change without prior notice due to products optimization.