

# FIREGUARD SINGLE INTERLOCK, SUPERVISED PREACTION SYSTEM WITH ELECTRIC RELEASE

#### **DESCRIPTION**

The Single Interlock Supervised Preaction System is generally used to protect water sensitive areas such as computer rooms, storage areas, libraries, archives, banks etc. to avoid water

damage due to damaged sprinklers or dar Preaction System is also effectively used a possible fire condition and allows tim hand held fire extinguishing equipment, r through sprinkler heads. It uses an aut supplemental detection system. In the  $\epsilon_i$ be extinguished by hand held fire extingu increase in temperature will open one or to discharge water. In normal condition, not contain water in the sprinkler piping contains air pressure for the purpose of tightness. As per NFPA, the preaction sy than 20 automatic sprinklers is to hav automatically supervised. The electric single interlock preaction system will re than the automatic sprinkler. When fir electric system, the primary water contr allowing water flow into the sprinkler r possible subsequent opening of one or r





#### **SYSTEM OPERATION**

The Electric Actuated, Supervised Sing System utilizes automatic sprinklers and

detection system. Electric detection system utilizes 24v.DO heat detectors or smoke detectors. When one electric detector senses the presence of fire, the releasing control panel activates fire alarm devices and latches solenoid valve in open position. If two detectors are cross zoned, then operation of the two detectors will be required to activate the fire alarm device and latch open the solenoid valve. Opening of solenoid valve will drain the water from deluge valve diaphragm chamber, there by reducing the diaphragm chamber pressure and actuation of the deluge valve, allowing the water flow in the sprinkler system.

The water flow will also produce water pressure in the alarm trim of deluge valve. This may actuate the pressure switch if additionally provided to control the shut down of equipment such as computers or start up of the second alarm devices. The flow of water converts the dry system into the wet system at this stage. The water discharge will start only when one or more automatic sprinkler open due to increase in temperature. In normal condition the integrity of system is automatically supervised by the automatic air supervisory means. Air or nitrogen at 0.7  $\pm$  0.14 Kg./Sq.Cm. (10  $\pm$  2 PSI) pressure is maintained in the sprinkler system up to the downstream of the riser check valve.

he supervisory low alarm switch is set at  $0.42 \pm 0.07$  Kg/ Sq.Cm. (6  $\pm$  1 PSI). The decreasing pressure will give trouble annunciation due to the loss of pressure, due to abnormal leakage in the sprinkler system piping as a result of the damaged sprinkler or broken pipeline. This will not open the deluge valve. The air pressure is for supervisory alarm only. The automatic supervisory air supply can be maintained through factory set air compressor.

or is compact and can be riser mounted or The supervisory air can be maintained with nted compressor and air maintenance device. plaint air supply or regulated Nitrogen source nen air maintenance device shall be used to

maintain the suprvisory air supply. The major benefits of this system as compared to the wet pipe system are,

- 1. A fire alarm sounds prior to operation of a sprinkler, which may enable to extinguishing of the fire by hand held means, before operation of any sprinkler head. This can eliminate water damage.
- 2. Whenever integrity of the piping or sprinkler is disturbed, no water flows, only trouble annunciation alarm signals. This will avoid water damage to valuable property.
- 3. Early fire alarm is provided by electric detection system, without the delay of water delivery time.

#### RECOMMENDED SEQUENCE OF INSTALLATIONS

- 1. 1. Install the Deluge Valve on Riser.
- 2. 2. Install the Riser Check Valve above Deluge Valve as shown in installation drawing.
- 3. On completion of system piping, install all the trims as per trim drawing. Care must be taken to ensure that Check Valves, Strainers, Valves etc. are installed with the flow arrows in the proper direction.
- 4. Connect all drain piping as shown in the drawing. 4.
- 5. 5. All unused opening on valve or trim parts must be plugged.
- 6. Connect air supply line.
- 7. Connect all electrical to control panel as per wiring drawing.
- 8. Make sure that all the nut bolts, fittings are screwed properly.
- Follow the valve resetting and test procedure.

Unit 11, Chancel Industrial Estate, Newhall Street, Willenhall, WV13 1NX, United Kingdom



# SINGLE INTERLOCK, SUPERVISED PREACTION SYSTEM WITH ELECTRIC RELEASE

#### **TECHNICAL DATA**

| MODEL                           | 50, 80, 100, 150 & 200 NB  |
|---------------------------------|--|
| DELUGE VALVE                    | Model D1, UL Listed  |
| CHECK VALVE                     | Model - CH   |
| SPRINKLER ALARM                 | UL Listed (Optional)   |
| RELEASE PANEL                   | UL Listed (Optional)   |
| WATER FLOW SWITCH               | UL Listed  |
| SOLENOID VALVE                  | 24V DC, UL Listed  |
| AUTOMATIC AIR SUPERVISOR        | Oil-less Risermount Compressor (Optional)                                |
| AIR PRESSURE MAINTENANCE DEVICE | PMD-1 (Optional)   |
| MANUAL SYSTEM<br>SHUTOFF VALVE  | UL Listed, Butterfly Valve - Standard supply.<br>(Gate Valve - Optional) |
| MAXIMUM WORKING<br>PRESSURE     | 17.5 Kg./sq.cm. (250 PSI)  |
| SYSTEM END CONNECTION           | Grooved (Standard supply) Flanged (Optional supply)                      |
| APPROVAL                        | UL Listed  |

#### **INSTALLATION & COMMISSIONING**

The preaction system valves, panel, indicators must be installed in a readily visible and accessible location. The system valves and accessory shall not be installed in an area having temperature less than 4°C (40°F). Heat tracing to system valve and accessory is not permissible. The system must be installed and operated carefully by a trained person, having good knowledge of equipment. All system piping must be flushed thoroughly before commissioning. After initial successful tests, an authorized person must be trained to perform inspection, testing and maintenance of the system.

#### Note:

The system may have arrangement of electric detectors in a cross-zoned array. The arrangement will prevent false activation of one detector, causing water to flow into the sprinkler piping. Few approving authorities do not permit cross zoning, hence system designer must design the system as per Local Authority having Jurisdiction. The system to be hydraulically calculated as a wet pipe system. It is strongly recommended that Detection System must be designed to operate sooner than the automatic sprinkler heads.

#### **INSPECTION & MAINTENANCE**

Inspection and testing is to be carried out only by an authorized and trained personnel. DO NOT TURN OFF the water supply or close any valve to make repair(s) or test the valve, without placing a roving fire patrol in the area covered by the system. Also inform the local security personal and central alarm station, so that there is no false alarm signal. It is recommended to carry out physical inspection of the system at least twice a week. The inspection should verify that no damage has taken place to any components and check for following normal condition of the system.

#### **NORMAL CONDITION**

- All main valves are open and sealed with tamper proof seal.
- 2. All drain valves are in closed condition.
- 3. No leak or drip is detected from drip valve.
- 4. All water gauge of deluge valve, should show the required pressure.
- 5. No leak in any trim or other piping.
- 6. Release panel is on and no abnormal indication are seen.
- 7. All testing procedure to be verified at Jalgaon.

#### CAUTION A

Procedure outlined below will result in operation of associated alarm. Concerned authorities to be in formed about the tests before conducting the tests.

### **QUARTERLY TEST WATER FLOW ALARM TEST**

Open the sprinkler alarm gong test valve, the water will flow through sprinkler alarm and/or water flow switch. On satisfactory observation close the alarm test valve.

#### **RESETTING PROCEDURE**

- a. Close the system water supply valve provided at inlet of deluge valve. Open the main drain valve.
- b. Energize the solenoid valve through release panel as per instruction of panel manufacturers. Water flow must start through solenoid valve and deluge valve diaphragm chamber pressure must drop down and water will get discharged through Solenoid Valve continuously.
- c. De-energize to close the solenoid valve and follow resetting procedure.

#### AIR SUPERVISORY LOW PRESSURE ALARM

Release air pressure gradually through valve provided on check valve. When air pressure drops to  $0.42\pm0.07$  Kg./Sq.Cm. (6 PSI  $\pm$  1), the supervisory low pressure alarm must be observed. Close the valve & observe that air pressure has been established to  $0.7\pm0.14$  Kg. / Sq. Cm. (10  $\pm$  2 PSI), the supervisory air pressure alarm must come to normal condition. If required reset the release panel.

#### ANNUAL OPERATION TEST

Testing valve operation without causing water upply to the deluge valve.

- 1. Close the main system valve controlling water supply to the deluge valve.
- 2. Open the main drain valve provided on deluge inlet side and allow water to drain. When water flow from drain valve has stopped crack open the main system valve and close the main drain valve partly allowing the water pressure at inlet of deluge valve to raise up to 1.4 Kg. / Sq. Cm.(20 PSI) and no more pressure is rising.



# SINGLE INTERLOCK, SUPERVISED PREACTION SYSTEM WITH ELECTRIC RELEASE

- 3. Actuate the solenoid valve from control panel as per instruction of control panel manufacturer. deluge valve must open and water flow must be noticed through drip valve and through solenoid valve. Close the main supply control valve immediately and allow water to drain from drain valve.
- 4. When water flow has stopped, reset the deluge valve as per resetting procedure.

#### CAUTION A



The steps b & c must be performed very quickly to prevent water flow to riser.

For abnormal condition of deluge valve refer the data sheet No. HD235.


#### CAUTION A



The system must be inspected, tested and maintained as instructed above, in addition to the requirement of NFPA or as per requirement of authority having jurisdiction. The owner is responsible for the inspection, testing and maintenance of the system and devices.



# FIREGUARD SINGLE INTERLOCK, SUPERVISED PREACTION **SYSTEM WITH ELECTRIC RELEASE**

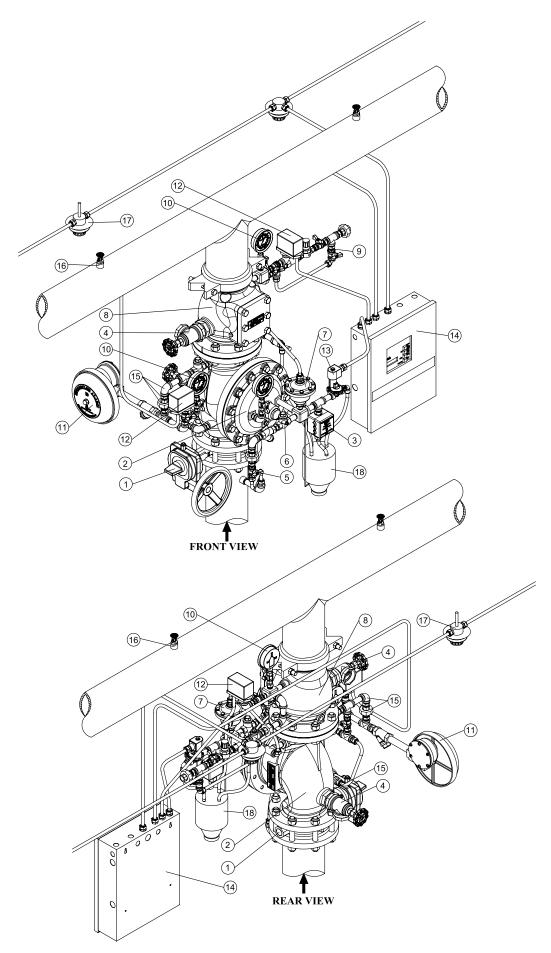

Unit 11, Chancel Industrial Estate, Newhall Street, Willenhall, WV13 1NX, United Kingdom

# FIREGUARD SINGLE INTERLOCK, SUPERVISED PREACTION SYSTEM WITH ELECTRIC RELEASE

### SINGLE INTERLOCK, SUPERVISED PREACTION SYSTEM ELECTRIC ACTUATED - PART LIST

|         |  |   | PREACTION TRIM SIZE       | QUANTITY PER PREACTION TRIM |                               |        |       |       |  |
|---------|--|---|---------------------------|-----------------------------|-------------------------------|--------|-------|-------|--|
| ITEM NO | CODE NO  | DESCRIPTION   | SIZE                      | 200 NB                      | 150 NB                        | 100 NB | 80 NB | 50 NB |  |
| 1       |  | BFV WAFER TYPE GEAR OPRT.<br>WITH TAMPER SWITCH *     | 2",<br>(MODEL NO.HDMW300) | 1                           | 1                             | 1      | 1     | 1     |  |
| 2       | 6458   | DELUGE VALVE FLANGE END                               | 2", (MODEL NO.DV-D1)      | -                           | -                             | -      | -     | 1     |  |
| 2       | 6455   | DELUGE VALVE FLANGE END                               | 3", (MODEL NO.DV-D1)      | -                           | -                             | -      | 1     | -     |  |
| 2       | 6454   | DELUGE VALVE FLANGE END                               | 4", (MODEL NO.DV-D1)      | -                           | -                             | 1      | -     | -     |  |
| 2       | 6453   | DELUGE VALVE FLANGE END                               | 6", (MODEL NO.DV-D1)      | -                           | 1                             | -      | -     | -     |  |
| 2       | 6457   | DELUGE VALVE FLANGE END                               | 8", (MODEL NO.DV-D1)      | 1                           | -                             | -      | -     | -     |  |
| 3       | 1951   | EMERGENCY RELEASE STATION                             | 1/2",                     | 1                           | 1                             | 1      | 1     | 1     |  |
| 4       | 9392   | ANGLE VALVE   | 1-1/4"                    | -                           | -                             | -      | 1     | 1     |  |
| 4       | 9394   | ANGLE VALVE   | 2"                        | 1                           | 1                             | 1      | -     | -     |  |
| 5       | 9423   | PRIMING VALVE   | 1/2"                      | 1                           | 1                             | 1      | 1     | 1     |  |
| 6       |  | RESTRICTED CHECK VALVE                                | 1/2"                      | 1                           | 1                             | 1      | 1     | 1     |  |
| 7       | 1825   | ANTI RESET VALVE (ARV-1)                              | 1/2"                      | 1                           | 1                             | 1      | 1     | 1     |  |
| 8       | 3569   | CHECK VALVE - FLANGE TO GROOVE                        | 2",                       | -                           | -                             | -      | -     | 1     |  |
| 8       | 114345   | CHECK VALVE - FLANGE TO GROOVE                        | 3",                       | -                           | -                             | -      | 1     | -     |  |
| 8       | 114346   | CHECK VALVE - FLANGE TO GROOVE                        | 4",                       | -                           | -                             | 1      | -     | -     |  |
| 8       | 114343   | CHECK VALVE - FLANGE TO GROOVE                        | 6",                       | -                           | 1                             | -      | -     | -     |  |
| 8       | 114347   | CHECK VALVE - FLANGE TO GROOVE                        | 8",                       | 1                           | -                             | -      | -     | -     |  |
| 9       | 1674   | PRESSURE MAINTENANCE DEVICE*                          | 1/2"                      | 1                           | 1                             | 1      | 1     | 1     |  |
| 10      | 114071   | PRESSURE GAUGE  | 0-300 PSI, UL LISTED      | 1                           | 1                             | 1      | 1     | 1     |  |
| 11      | 1416   | SPRINKLER AALRM (GONG BELL)*                          | (TYPE-A)                  | 1                           | 1                             | 1      | 1     | 1     |  |
| 12      |  | PRESSURE SWITCH                                       | POTTER MAKE, UL LISTED    | 1                           | 1                             | 1      | 1     | 1     |  |
| 13      |  | SOLENOID VALVE  | PARKER MAKE, UL LISTED    | 1                           | 1                             | 1      | 1     | 1     |  |
| 14      |  | DV RELEASING PANEL *                                  | POTTER MAKE, UL LISTED    | 1                           | 1                             | 1      | 1     | 1     |  |
| 15      |  | TRIM FITTINGS   |                           | 1                           | 1                             | 1      | 1     | 1     |  |
| 16      |  | AUTOMATIC SPRINKLER **                                |                           | 1                           | 1                             | 1      | 1     | 1     |  |
| 17      |  |   |                           | 1                           | 1                             | 1      | 1     | 1     |  |
| 18      |  | HEAT DETECTOR/ SMOKE DETECTOR **  SPLASH PROOF FUNNEL |                           | 1                           | 1                             | 1      | 1     | 1     |  |
| 18      |  | SPLASH PROOF FORNIEL                                  |                           | 1                           | '                             | ļ ļ    | '     |       |  |
|         | * OPTIONAL SUPPLIY   |   |                           |                             |                               |        |       |       |  |
|         | ** NOT SUPPLLIED BY HD FIRE  |   |                           |                             |                               |        |       |       |  |
|         | NOTES.   |   |                           |                             |                               |        |       |       |  |
|         | NOTES:   |   |                           |                             | T FLANCE FND                  |        |       |       |  |
|         | DELUGE VALVE END CONNECTION (OPTIONAL - G X G/ F X F)  |   |                           |                             | F = FLANGE END G = GROOVE END |        |       |       |  |
|         | CHECK VALVE END CONNECTION (OPTIONAL - G X G/ F X G / F X F)  BUTTERFLY VALVE END CONNECTION (OPTIONAL - G X G/ WAFER TYPE / LUG TYPE) |   |                           | 0 = 0HU                     | OVE EIND                      |        |       |       |  |
|         | PRESSURE GAUGE (OPTIONAL - HDP-1 / HDP-2)  |   |                           |                             |                               |        |       |       |  |
|         | OPTIONAL TRIM SUPPLY - LOOSE / SEMI ASSEMBLED)   |   |                           |                             |                               |        |       |       |  |
|         | SHAPE OF FITTINGS / VALVES MAY CHANGE.   |   |                           |                             |                               |        |       |       |  |
|         | SYSTEM PIPING, SPRINKLER, DETECTOR NOT SUPPLIED BY FIREGUARD   |   |                           |                             |                               |        |       |       |  |
|         | PRIMING LINE BY OTHERS   |   |                           |                             |                               |        |       |       |  |

#### **ORDERING INFORMATION**

